



Out-Of-The-Box
Setup

Unzip both zippers to open the pack. Locate and disconnect all 2" Fastex buckles and then remove front panel from pack. Unstrap and flip over MOLLE flap at the bottom to reveal Standard strap. Remove strap from pack.



Insert strap into pack sleeve and secure with Velcro patch inside.



Find strap on the right shoulder strap and remove from slide fastener at the top of the pack.



Thread the slide fastener back through elastic opening in the top of the pack and into the inner pack.

This is what you should see once threaded



Thread strap through slide fastener and secure with Velcro strap on top.

Place the front panel 2" Fastex buckle into this strap and adjust height of plate to the user.

Connect the 2" Fastex from the back panel to the front panel as shown.

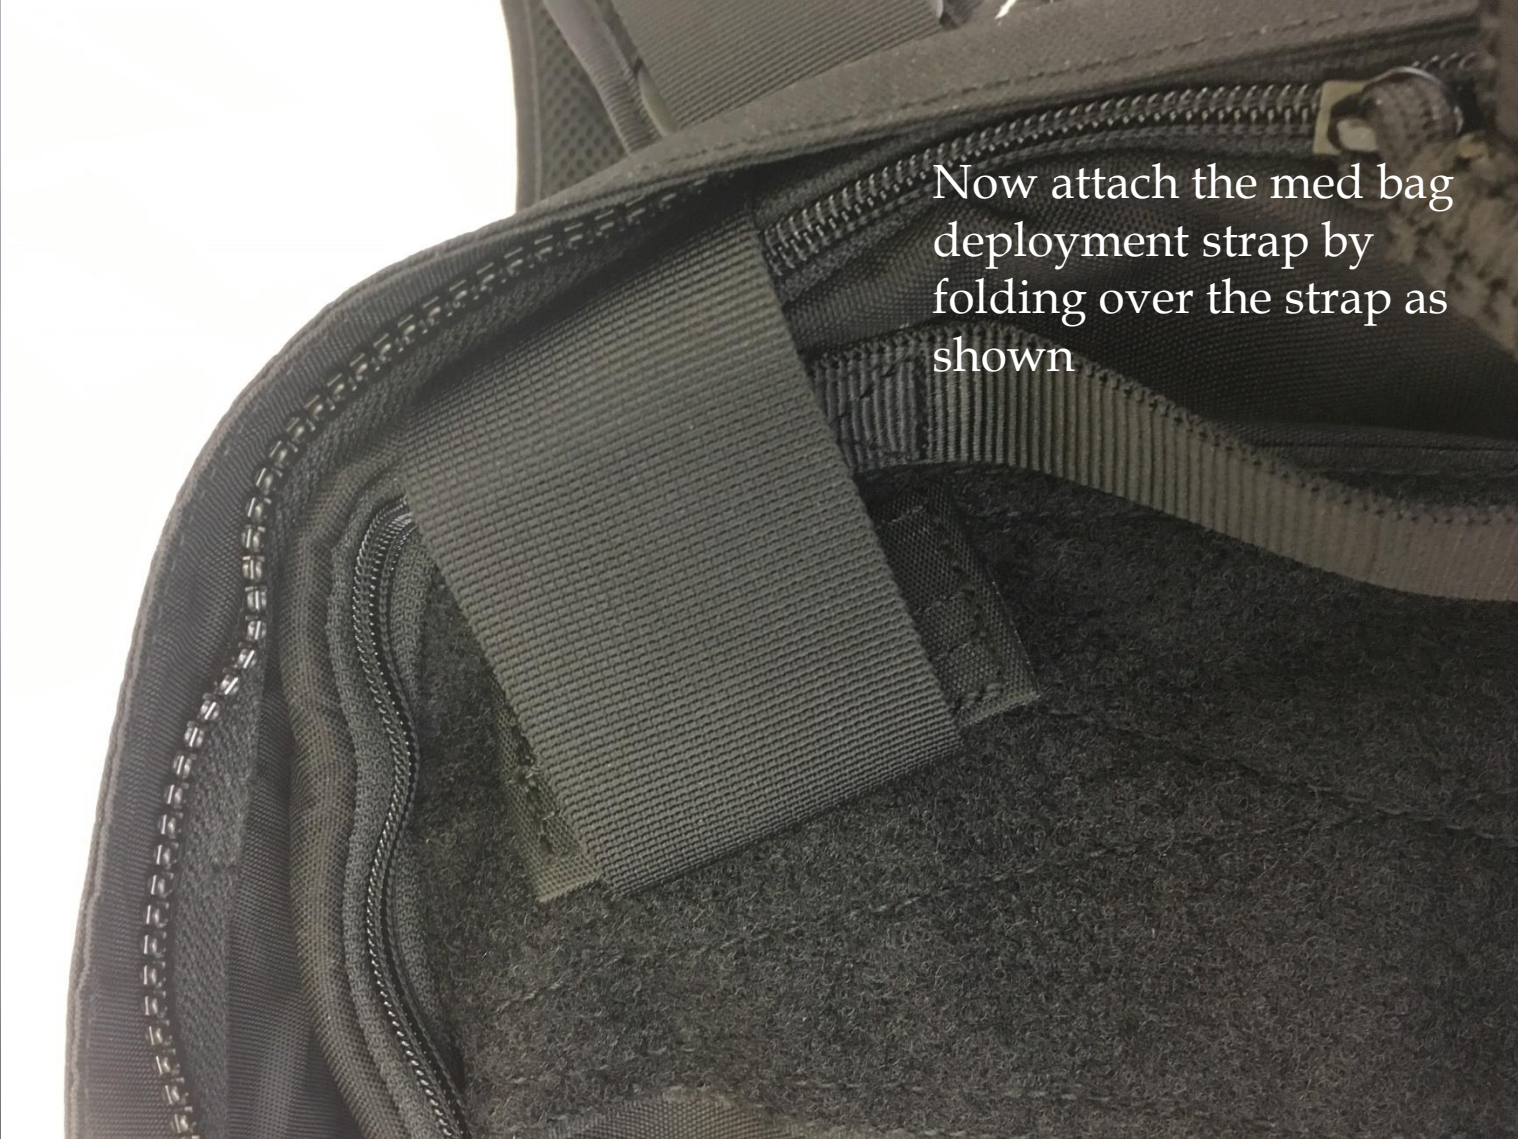


Insert Med bag in back compartment and attach the lower velcro portion pictured




Secondly affix the med bag to the upper velcro and dress the outer portions of the pack itself.




A close-up photograph of a dark-colored medical bag. A wide, textured deployment strap is shown being folded over a smaller, narrower strap that is already attached to the bag. The bag has multiple zippers with metal teeth and pull tabs. The background is a plain, light color.

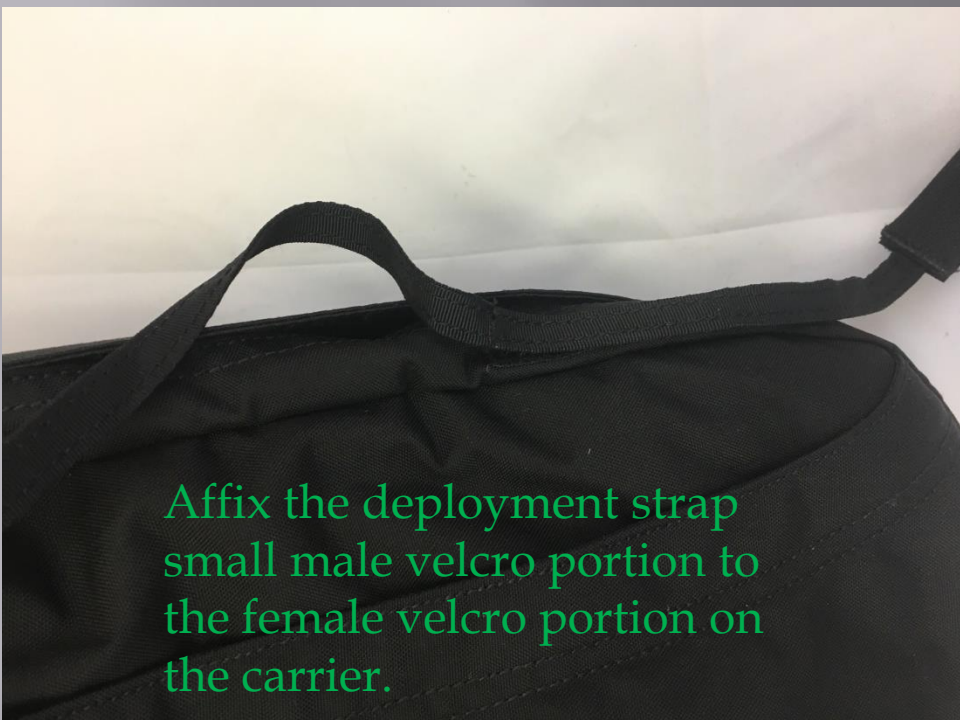
Now attach the med bag
deployment strap by
folding over the strap as
shown

A black tactical bag with multiple straps and buckles. The front panel is partially unzipped and folded back, revealing the interior. The bag is lying on a white surface.

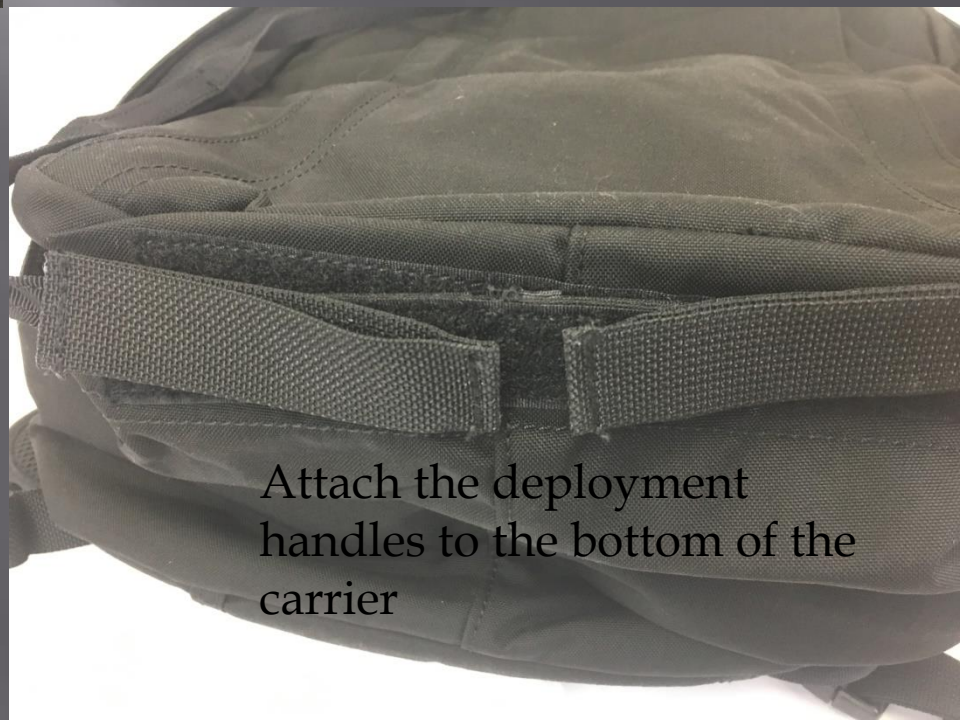
Flip the front panel over to
meet up with the back panel

The black tactical bag is now fully closed. The front panel is folded over the back, and the top zipper is visible. The bag is lying on a white surface.

Zip up both side of the pack to
meet in the middle of the top

A black fabric bag, likely a carrier, is shown against a white background. A black strap is attached to the top of the bag. The text is overlaid in green.

Affix the deployment strap
small male velcro portion to
the female velcro portion on
the carrier.

A green fabric bag, likely a carrier, is shown against a white background. Two black straps are attached to the bottom of the bag. The text is overlaid in black.

Attach the deployment
handles to the bottom of the
carrier

Your CARR pack is now
completely set up and ready
for deployment!

